

# Windows VB example for switching on and off the KMTronic USB One Relay




© KMTronic 2011

## Downloads:

- FTDI drivers  
<http://www.ftdichip.com/Drivers/VCP.htm>

## Step by step instructions:

1. Download the drivers
2. Connect USB relay and install drivers
3. Check in Device Manager COM port where the Relay is installed (in this example it is COM Port 5)

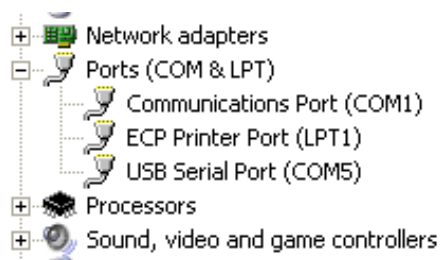

## Sample C# code:

```
private void button1_ON_Click(object sender, EventArgs e)
{
    serialPort1.Write(new byte[] { 0xFF, 0x01, 0x01 }, 0, 3);
}

private void button1_OFF_Click(object sender, EventArgs e)
{
    serialPort1.Write(new byte[] { 0xFF, 0x01, 0x00 }, 0, 3);
}
```

